




DK219 Rhino-Rack VA, Aero, Euro & HD crossbar instruction



Vehicle	Date	Crossbar	FRONT CROSSBAR					REAR CROSSBAR						
			Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Volvo S40 4dr sedan	2005-2011	1260mm	M506 SUB0144	M505 SUB0144	188mm	75mm	1024mm / 40,5/16"	OUT	M505 SUB0145	M506 SUB0145	178mm	65mm	1004mm / 39,17/32"	OUT
			Arrow OUT						Arrow OUT					

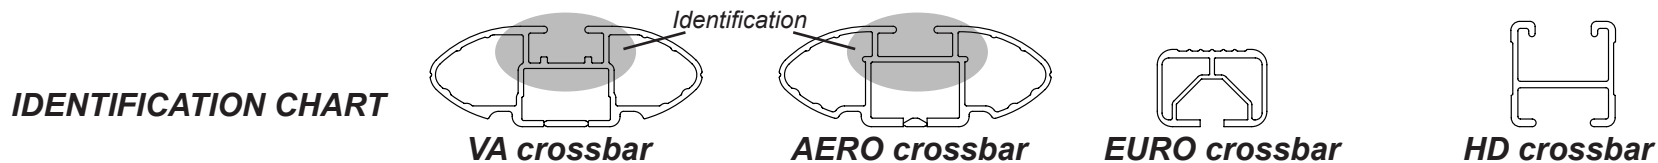

DK219 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.


Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.


Placement of pads:

- Pad M505 FRONT Left of vehicle. Arrow facing outward.
- Pad M506 FRONT Right of vehicle. Arrow facing outward.
- Pad M505 REAR Right of vehicle. Arrow facing outward.
- Pad M506 REAR Left of vehicle. Arrow facing outward.

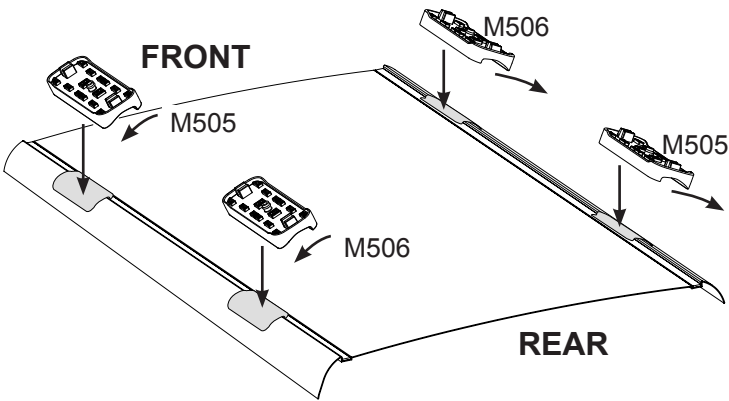



Pad orientation:

Arrows on all pads face to outside of vehicle when installed.
(Underside of pads shown).

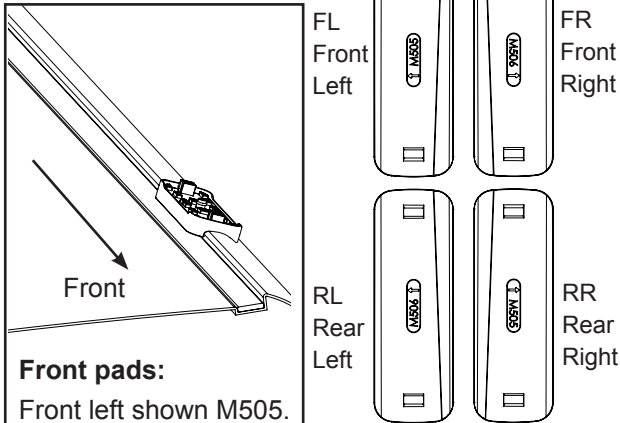

Front pads:
Front left shown M505.

Direction of Pad, Arrow and Foot Plates

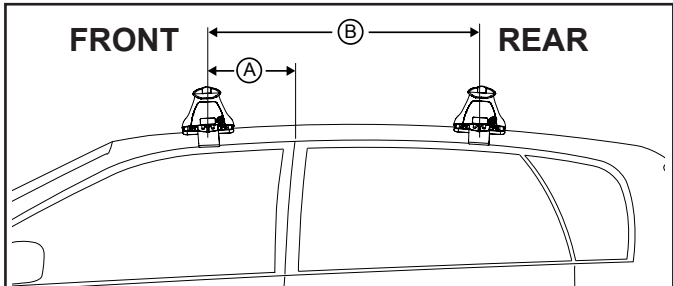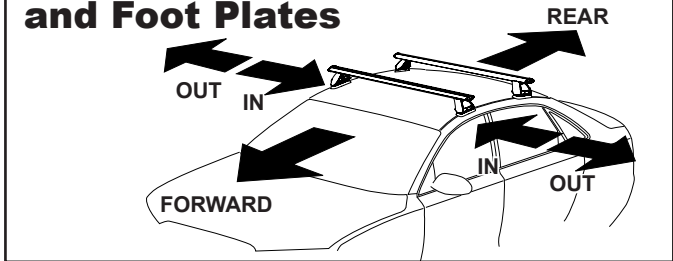

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Volvo S40 4dr sedan	2005-2011	290mm / 11,27/64"	650mm / 25,19/32"	50kg / 110lbs