






CROSSBAR IDENTIFICATION



VA crossbar



EURO crossbar



HD crossbar

**Instruction for
DK475 and RS725**

		FRONT CROSSBAR							REAR CROSSBAR					
Vehicle	Date	Crossbar	Front Right Pad/Clamp	Front Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/Clamp	Rear Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Škoda Fabia NJ 5dr Hatch	15-	1260mm	M415 SUB0657	M414 SUB0657	160mm	47mm	968mm / 38,7/64"	OUT	M504 SUB0657	M503 SUB0657	157mm	44mm	962mm / 37,7/8"	OUT
			Pad Arrow OUT						Pad Arrow OUT					



Rhino-Rack 2500 Series - DK475 instruction

CONTROLLED



Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated up to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Direction of Pad Arrow and Foot Plate Arrow, Refer Page 1.

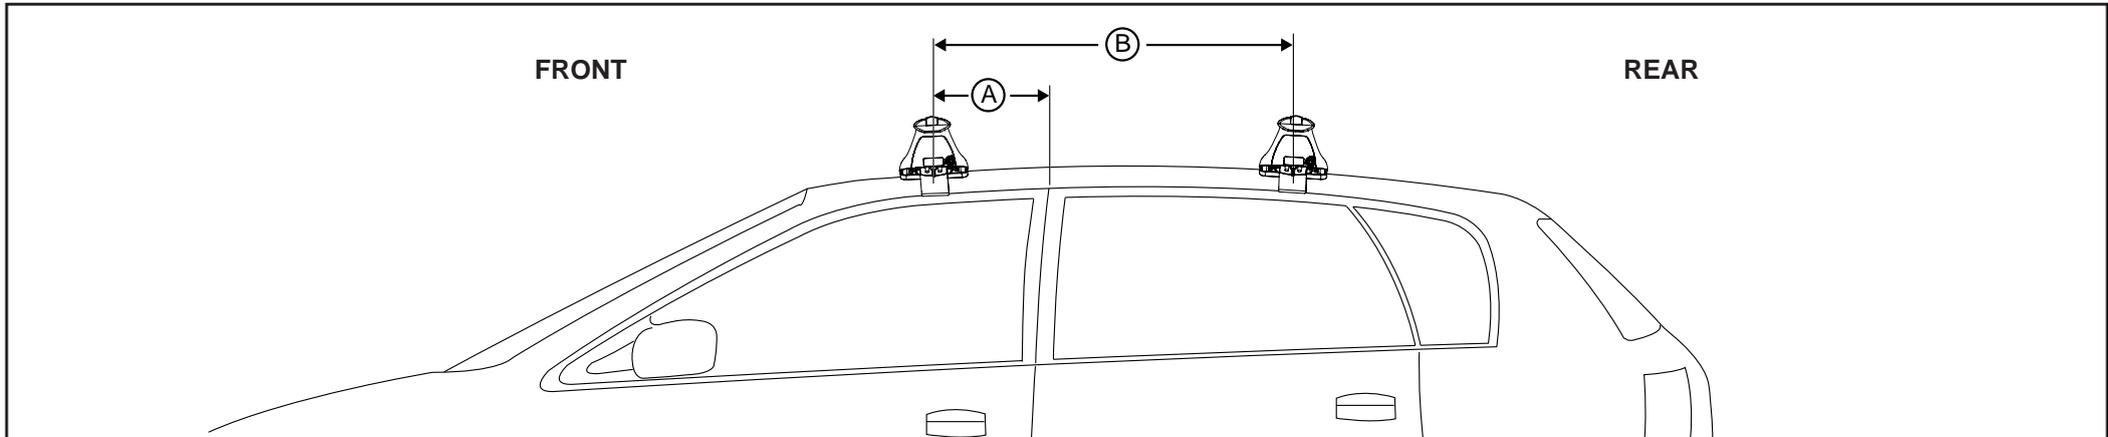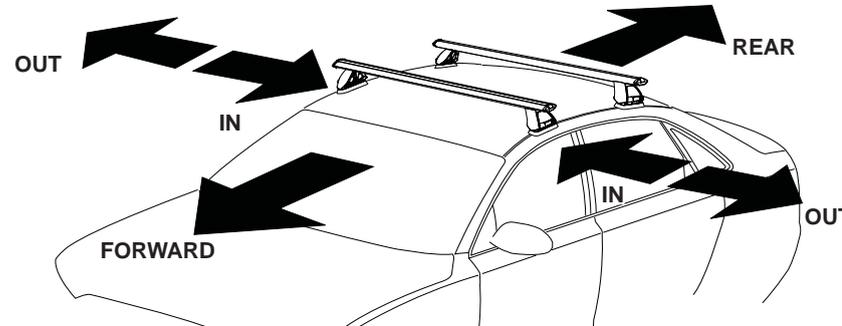

VEHICLE	Date	Measurement A	Measurement B	Load Rating up to (includes racks 5kg/ 11lbs)
Škoda Fabia NJ 5dr Hatch	15-	260mm / 10,1/4"	795mm / 31,5/16"	75kg / 165lbs